

# INSTALLATION MANUAL

## Agra-GPS Gleaner-JD Bridge for S78 combines



Version 1.2  
June 2026

*June 2026*

Contact information  
Agra-GPS Ltd.  
Box 2585  
Stony Plain, AB  
T7Z 1X9  
CANADA  
+1 (825) 247-2477  
support@agragps.com  
www.agra-gps.com

### **Release Notice**

This is the June 2026 release of the Gleaner-JD Bridge Installation Manual.

### **Disclaimer**

While every effort has been made to ensure the accuracy of this document, Agra-GPS Ltd assumes no responsibility for omissions and errors. Nor is any liability assumed for damages resulting from the use of information contained herein. Agra-GPS Ltd shall not be responsible or liable for incidental or consequential damages or a loss of anticipated benefits or profits, work stoppage or loss, or impairment of data arising out of the use, or inability to use, this system or any of its components.

**DO NOT USE THE Gleaner-JD Bridge IF YOU DISAGREE WITH THE DISCLAIMER.**

## **Important Safety Information**

Read this manual and the operation and safety instructions carefully before installing the Gleaner-JD Bridge.

- Follow all safety information presented within this manual.
- If you require assistance with any portion of the installation or service of your equipment, contact your Agra-GPS for support.
- Follow all safety labels affixed to the system components. Be sure to keep safety labels in good condition and replace any missing or damaged labels. To obtain replacements for missing or damaged safety labels, contact Agra-GPS.

When operating the machine after installing the Gleaner-JD Bridge, observe the following safety measures:

- Be alert and aware of surroundings.
- Do not operate the Gleaner-JD Bridge system while under the influence of alcohol or an illegal substance.
- Remain in the operator's position in the machine at all times Gleaner-JD Bridge system is engaged.
- Determine and remain a safe working distance from other individuals. The operator is responsible for disabling the Gleaner-JD Bridge system when the safe working distance has been diminished.
- Ensure the Gleaner-JD Bridge is disabled prior to starting any maintenance work on the machine or parts of the Gleaner-JD Bridge system.
- Follow all safety instructions from the Gleaner system as well as the JD system.
- The Gleaner-JD Bridge must only be used in the field, never on the street.

## **Electrical Safety**

- Always verify that the power leads are connected to the correct polarity as marked. Reversing the power leads could cause severe damage to the equipment.
- Verify that all cables and connectors are not going over sharp edges and are not pinned, as this could cause power shortages and/or malfunctions.

## Introduction

Congratulations on your purchase of the Gleaner-JD Bridge. The Gleaner-JD Bridge is designed to bridge the communication between a Gleaner combine (Autoguide ready) and John Deere or Vision displays. This allows a JD display to create maps in the John Deere format and also provides straight AB-Line autosteer.

The operator used the JD display to create AB-lines. The current position is determined by a John Deere receiver and all this information is used by the Gleaner-JD Bridge to create steering instructions for the Gleaner combine. All conditions for autosteer such as minimum speed, steering enabled etc. Must be met by the Gleaner system before the autosteer engage option can be activated.

## NOTICE

This manual is not intended to replace the manuals for the Gleaner tractor or the John Deere system. The operator must read and understand the manuals and instructions of these systems, before using the Gleaner-JD Bridge.

## What's In The Box

The AGCO-JD-GLS78 kit consists of the following items:

- a. Gleaner S78 Bridge
- b. Gleaner S78 Machine Adapter  
(SKU: AGCOJDGLS78MA)
- c. JD12 Harness for connection to receiver  
and monitor  
(SKU: JD12)



**NOTE:** If you are missing any of these items or they appear to be damaged please contact +1 (825) 247-2477 or [support@agragps.com](mailto:support@agragps.com)

## **Step 1: Mounting the Gleaner-JD Bridge**

The Gleaner-JD Bridge is installed right of the driver seat. Ensure the bridge is safely mounted then connect the 12-pin grey mini connector of the Gleaner S78 Machine Adapter to the bridge.



Open the electrical panel to the right of your seat and expose the two diagnostic ports tucked into the lower side of the panel.




Use the two diagnostic port connections to connect to the Gleaner JD-Bridge. Both of these diagnostic ports are visually the same, so care is needed to make sure the proper connections are made. The main diagnostic port of the Gleaner-JD Bridge (labelled Main) is connected to the rightmost diagnostic port, while the secondary diagnostic port of the Gleaner-JD Bridge (labelled Secondary, and contains only 1 green and 1 yellow wire) is connected to the leftmost diagnostic port.

If these diagnostic ports are interchanged, an error will be displayed in the Agra-GPS ISOApp in the JD Display notifying the user that the ports have been switched, and need to be corrected.



The loose red wire of the Gleaner JD-Bridge needs to be tied in to the 12+ **constant** battery power bolt on the large PCB located above the two diagnostic ports.

Once these are installed, the 12-pin male Deutsch connector should be plugged into the 12-pin female Deutsch connector of the JD-12.

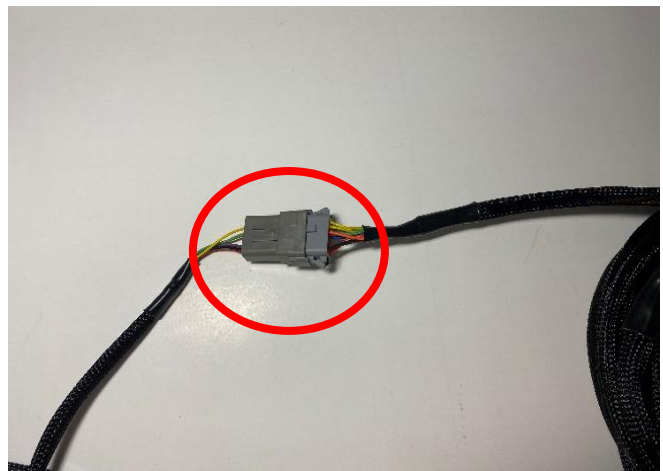

## Step 2: Mounting the JD Equipment

The John Deere GPS receiver **MUST** be mounted at the front of the cab.

The square receiver mount can be bolted onto the default AGCO mount at the front of the cab.


Use the 12-pin grey connector of the JD-12 harness to connect to the receiver.

It is best to route the JD-12 cable out through the right side of the cab and up to the roof.


The JD-display can be mounted many different ways. You may use the standard JD mounts or a RAM mount.

The RAM mount can be purchased from Agra-GPS or RAM directly.

RAM-270U + 2 \* 2.5 "balls (RAM-202U) + 4" double socket arm (RAM -201U)  
<https://www.agragps.com/product/cab-ram/?v=5435c69ed3bc>  
<http://www.rammount.com/part/RAM-270U>

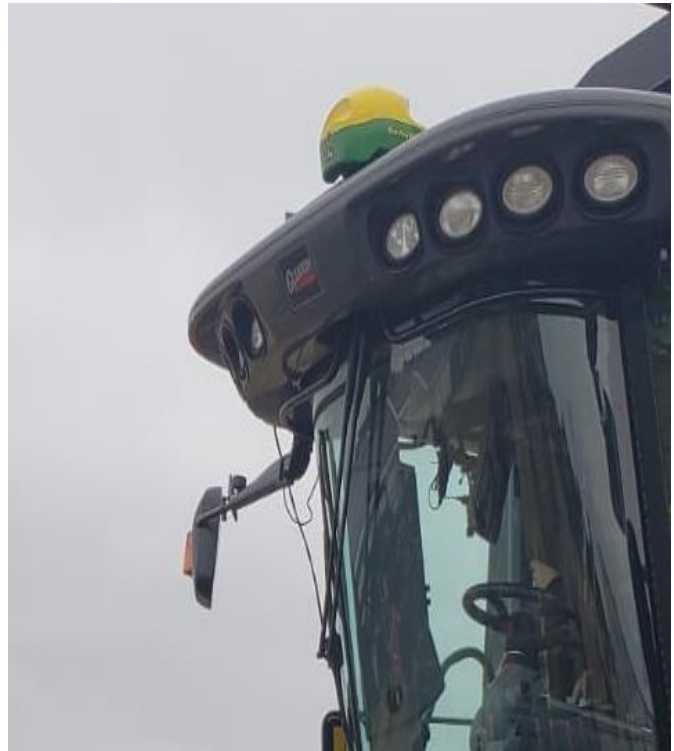

Once the monitor is mounted, take the final black adapter and connect it to the monitor.

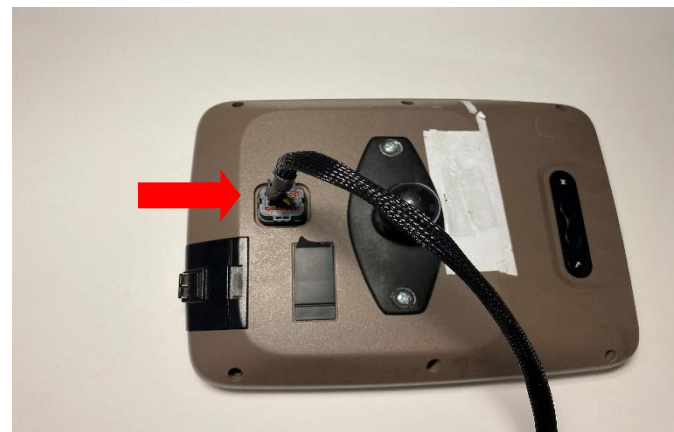

**Step 3: Once the receiver is installed, move on to the Bridge User Manual for instruction on how to access the ISO app**

**NOTE:** If you do not have the Bridge User Manual it can be found at <https://www.agragps.com/bridge-user-manual-english/>

## Step 4: Operating notes for the AgraGPS Gleaner-JD Bridge

Make sure your autoguide button is set to the ON position. It is located under the raising cover of the armrest, to the right of the driver's seat.



For autosteer activation you must follow the "normal" JD steps to be autosteer ready:

- create an AB-line
- Move from "Steer OFF" to "Steer ON" on the JD display.

Your machine must also be in "autosteer ready" mode, which means you must have a field gear selected, drive at a minimum speed and have moved your steering wheel at least once after engine start.

The autosteer is then enabled by pressing the built-in resume button on your armrest.

Autosteer settings can be tweaked within the JD display.



In order for yield and moisture to be displayed on the JD Monitor, a task must be started on the AGCO monitor in the machine.



### **Additional information for Gleaner-JD Bridge**

Work recording in the Gleaner-JD Bridge is done based off of header height. In order to configure this, the set 'Work Position' must be set in the ISOApp to the desired height at which recording should start. Whenever the current header position goes below this work position, recording will start. These instructions will also be found within the ISOApp itself.