

INSTALLATION MANUAL

Agra-GPS Deutz-JD Bridge



Version 1.3
July 2026

July 2026

Contact information
Agra-GPS Ltd.
Box 2585
Stony Plain, AB
T7Z 1X9
CANADA
+1 (825) 247 2477
support@agragps.com
www.agra-gps.com

Release Notice

This is the July 2026 release of the Deutz-JD Bridge Installation Manual.

Disclaimer

While every effort has been made to ensure the accuracy of this document, Agra-GPS Ltd assumes no responsibility for omissions and errors. Nor is any liability assumed for damages resulting from the use of information contained herein. Agra-GPS Ltd shall not be responsible or liable for incidental or consequential damages or a loss of anticipated benefits or profits, work stoppage or loss, or impairment of data arising out of the use, or inability to use, this system or any of its components.

DO NOT USE THE Deutz-JD Bridge IF YOU DISAGREE WITH THE DISCLAIMER.

Important Safety Information

Read this manual and the operation and safety instructions carefully before installing the Deutz-JD Bridge.

- Follow all safety information presented within this manual.
- If you require assistance with any portion of the installation or service of your equipment, contact your Agra-GPS for support.
- Follow all safety labels affixed to the system components. Be sure to keep safety labels in good condition and replace any missing or damaged labels. To obtain replacements for missing or damaged safety labels, contact Agra-GPS.

When operating the machine after installing the Deutz-JD Bridge, observe the following safety measures:

- Be alert and aware of surroundings.
- Do not operate the Deutz-JD Bridge system while under the influence of alcohol or an illegal substance.
- Remain in the operator's position in the machine at all times when the Deutz-JD Bridge system is engaged.
- Determine and remain a safe working distance from other individuals. The operator is responsible for disabling the Deutz-JD Bridge system when a safe working distance has been diminished.
- Ensure the Deutz-JD Bridge is disabled prior to starting any maintenance work on the machine or parts of the Deutz-JD Bridge system.
- Follow all safety instructions from Deutz as well as the John Deere.
- The Deutz-JD Bridge must only be used in the field, never on the street!

Electrical Safety

- Always verify that the power leads are connected to the correct polarity as marked. Reversing the power leads could cause severe damage to the equipment.
- Verify that all cables and connectors are not going over sharp edges and are not pinned, as this could cause power shortages and/or malfunctions.

Introduction

Congratulations on your purchase of the Deutz-JD Bridge. The Deutz-JD Bridge is designed to bridge the communication between a Deutz tractor (autosteer ready) and a John Deere display (1800, 2600, 2630, or 4640). This allows a JD display to create maps in the John Deere format and also provides straight AB-Line, curve, or circletrack autosteer.

The operator uses the JD display to create AB-lines. The current position is determined by a John Deere receiver and all this information is used by the Deutz-JD Bridge to create steering instructions for the tractor. All conditions for autosteer such as minimum speed, steering enabled etc. Must be met by the Deutz tractor system before the autosteer engage option in the tractor can be activated.


NOTICE

This manual is not intended to replace the manuals for the tractor or the John Deere system. The operator must read and understand the manuals and instructions of these systems, before using the Deutz-JD Bridge.

What's In The Box

The Deutz-JD kit consists of the following items:

- A. Deutz-JD Bridge
- B. Deutz-JD Machine Adapter
(SKU: DEUTZJDMABS2)
- C. Deutz-JD Roof Adapter
(SKU: DEUTZJDRABS2)
- D. Deutz-JD Display Adapter
(SKU: DEUTZJDDABS2)

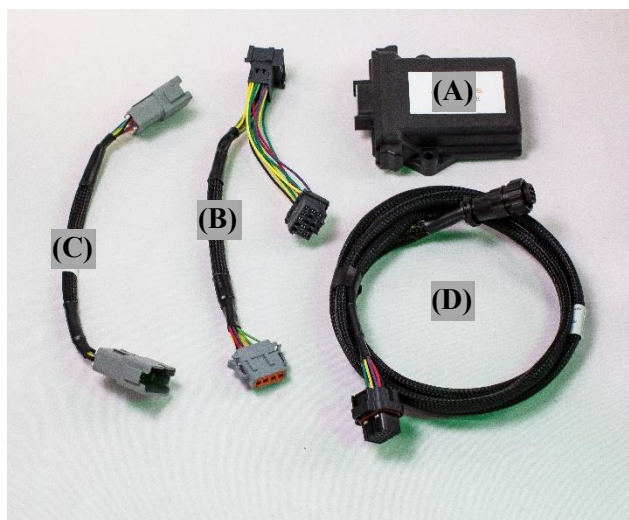

NOTE: If you are missing any of these items or they appear to be damaged please contact +1 (825) 247-2477 or support@agragps.com

Step 1: Installing the Machine Adapter

First, start by opening the temperature control panel at the top right of the cab. The panel is held in place by simple clamps, use a flathead screwdriver or similar to get access to the wire harnesses behind the panel. (be careful not to damage the plastic)



Find the blue 15-pin connector XC10 and open the connection. The connector is located to the right of the opening. Insert the Agra-GPS Machine Adapter into the 2 * 15-pin connection points.



The other end of the Machine Adapter will plug into the bridge. Once the Machine Adapter is connected place the bridge in the opening to the right. Close the opening by pushing the temperature panel back into its place.



Step 2: Installing the Display Adapter

The mounts for the JD display are NOT part of the Deutz-JD Bridge, however they can either be ordered as an optional item from AgraGPS or directly from RAM.

The JD-display may be mounted many different ways.

You may use the standard JD mounts or a RAM mount. RAM-270U + 2 * 1.5" balls (RAM-202U) + 4" double socket arm (RAM 201U)


<http://www.rammount.com/part/RAM-270U>



The round connector of the Display Adapter will connect to the incab-ISO connector located towards the bottom of the centre-right column.



Route the other end of the Display Adapter to the display and connect it.

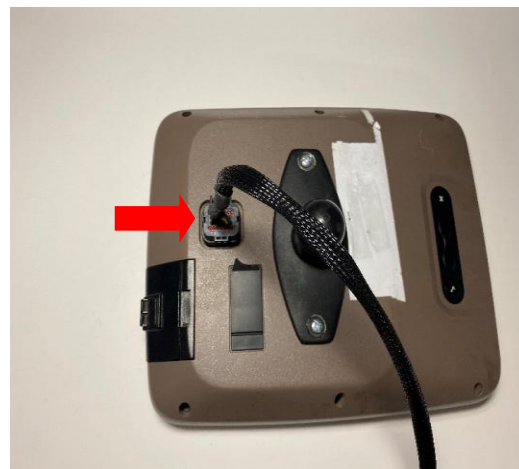

Step 3: Installing the Roof Adapter

The Deutz tractor is prepared for the Deutz receiver in the front of the cab. In this location a JD receiver mount can easily be mounted.

Once the receiver is mounted, connect the 12-pin side of the Roof Adapter labeled “Starfire” to the receiver.

The other end of the Roof Adapter will connect to the Deutz receiver adapter.



Step 4: Once the receiver is installed, move on to the Bridge User Manual for instructions on how to access the ISO app

NOTE: If you do not have the Bridge User Manual it can be found at <https://www.agragps.com/bridge-user-manual-english/>

Step 5: Notes On Steering

Easy steer must be enabled FIRST in order to use autosteer. To enable easy steer press and hold the steering wheel button for 3 seconds.



Depending on tractor model, the steering wheel button may appear at this location.



After this, field mode must be enabled by the rocker switch to the right back of the seat.

Autosteer must only be enabled in the field.
Never on the road!



If everything is enabled correctly there will be a steering wheel indicator light up on the dash.

The “Auto” button can be used to engage the steering. This will require steering prerequisites on the John Deere monitor to be met.

